

## OUTSIDE TEMP. & HUMI. TRANSMITTER

### (GOTHO-1420S)



#### Description

---

"GOTHO" Outside Air temperature & Humidity Transmitter is intended for controlling Sensor by detecting relative humidity and temperature of outside air for ventilation and air-handling units. This unit can also be used as an Interface detector used with display of sensing value or Auto control system of building.

#### Application

---

- Pulp/textile warehouse, greenhouse, computer room, R&D room, Hospital etc.
- Use measuring detector : In case of Optimistic function system.

#### Technical Data

---

- SUPPLY VOLTAGE : DC 15~30V
- OUTPUT SIGNAL : 4~20mA
- SENSING RANGE : Temp. /-30~+80℃ C, Humi. /0~100%Rh
- SENSING ELEMENT : Integrated Circuit
- TEMPERATURE CO EFFICIENT : 0.00385 OHMS
- SELF-GENERATING CURRENT : below 2mA (0.02 OHM / 0.05Deg.)
- ACCURACY : at 25℃ Within ±0.3℃, at 20~90%Rh, within ±3%Rh
- WIRING : 4Wire
- SENSING Time: Approx. 30sec.
- AMBIENTTEMPERATURE :  
1) On Operation: -35~+80℃
- AMBIENT HUMIDITY  
1) On Operation : 5 ~ 100%Rh

- 2) On Transportation & Storage : below 95%Rh
- PROTECTION CLASS : IP54(EN 60529)
- WEIGHT : 0.17Kg


### Notes

- Engineering :
  - 1) In case of control: Preferably install on the wall of building or house and keep away from direct light.

### Mounting & Notes

- 1) Installation height: Preferably install in the middle of house, building or heating area, and to be installed at least 1.5 meter above from the floor.
- 2) Prohibited Location: Window, door; Ventilating hole, upper place of heat source, and veranda or beneath the eaves of roof.
- 3) To prevent any deeding errors from convection of warm, air, cable wire tube of transmitter should be shielded and must not be painted.

### Wiring Diagram

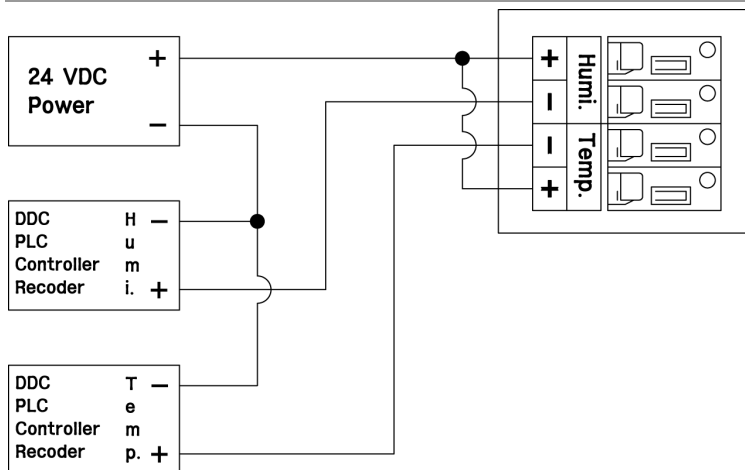

### Dimension

